

この度は、ケンコー「マウントアダプター」をお買い上げいただきまして誠にありがとうございます。
ご使用にあたってはこの取扱説明書をよくお読みいただき、
正しくお使いいただきますようお願いいたします。
※ご使用の前には必ず「安全上のご注意」をお読みください。

株式会社 ケンコー・トキナー
〒164-8616
東京都中野区中野5-68-10 KIT 中野ビル
☎ 0120-775-818
【携帯/PHS/IP】03-6840-3389(有料)

受付時間：9：15～17：30
(土曜日・日曜日・祝日・年末年始・夏期休業等を除く)
<http://www.kenko-tokina.co.jp/>

△ 注意

この指示に従わないで誤った取り扱いをすると、
人が障害を負う可能性があります。また、物的損害が発生する可能性があります。

△は、注意が必要な内容があることを示しています。
図の中に描かれているのは注意の内容です。
(左図は発火注意)

○は、禁止を示しています。

!は、取り扱い上の不注意(使用説明書以外の誤操作、落下、衝撃、水かかり、砂・泥の付着など)、お手入れの不備(カビ発生など)により発生した故障は修理不能になる場合があります。

●は、指示を示しています。
図の中に描かれているのは指示の内容です。
(左図は注意する旨の指示)

本説明書では、
次のような絵表示
を使用しています。

■ 安全上のご注意

安全のため、ご使用前には必ずこの「安全上のご注意」をよくお読みになり、それぞれの注意事項をお守りください。

△ 注意

! カメラに装着する時は、カメラに正しくセットし、きちんとロックされたことを確認してください。正しく装着されていない場合は、はずして落としケガをしたりするおそれがあります。



! カメラに装着したレンズとマウントアダプターに無理な過重をかけないでください。レンズ、マウントアダプターおよびカメラ側のマウント部分が損傷するおそれがあります。大型のレンズはマウント部分に負荷がかかりやすいので、操作時や移動時には必ずレンズを持つようにしてください。



! 長期間使用しないときや、結婚式や海外旅行など大切な写真を撮る時には、必ず事前にチェックしたり試し撮りをしたりして、失敗を防ぐようにしてください。



! マウントアダプターを改造、変造しないでください。レンズやカメラの故障の原因になります。改造、変造したマウントアダプターはサービスセンターでの修理が受けられない場合があります。また、ゴミや泥、砂、ホコリ、水、有害ガス、塩分などがレンズの中に入ると、故障の原因になりますからご注意ください。
※ シンナーやベンジンなどの有機溶剤は絶対に使用しないでください。



! このマウントアダプターは防水機構になっておりません。水没せないようにご注意ください。水没品は、ほとんど修理不能になりますので、取り扱いに十分ご注意ください。マウントアダプターに水滴や泥、砂などがついている時は水滴をぬぐい、砂などをプローラーなどできれいに落としてから静かにカメラからはずしてください。とくに海辺などで使用した後は、塩分が残らないよう十分拭いてください。



水滴などがついたまま放置しますと、毛細管現象により水がレンズ内部に浸み込んでいき故障の原因になりますのでご注意ください。


! 損傷が著しく製品の性能復元ができない場合、修理不能となることがありますのでご了承ください。

! お取り扱い上の不注意(使用説明書以外の誤操作、落下、衝撃、水かかり、砂・泥の付着など)、お手入れの不備(カビ発生など)により発生した故障は修理不能になる場合があります。

! 本製品の故障に起因する付随的障害(撮影に要した諸費用および撮影により得られる利益の損失など)については、補償いたしかねます。

! 本製品は写真撮影のための製品であり、それ以外の使用目的で使用された時の故障および付随的障害については、ご容赦ください。

各部の名称

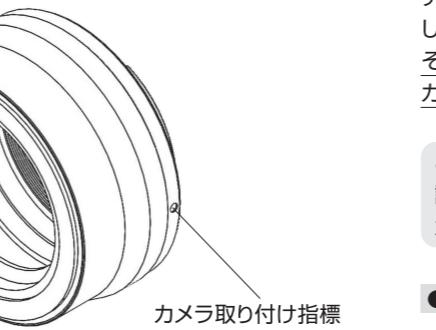

3. カメラボディの設定

デジタルカメラの設定を行います。カメラの電源をONにしてください。

その他製品の詳しい操作方法は、お使いのデジタルカメラ付属取扱説明書、ハンドブックをご覧ください。

ご注意：カメラの設定が出荷時初期設定の状態での設定方法をご説明しますので、お客様がお持ちのカメラ設定状態によっては、違う場合がございます。

● キヤノン EOS M

- ① 液晶画面左上の「撮影モード」をタッチします。
- ② 撮影モード [AVまたはM] を選択します。
- ③ 本体「MENU」ボタンを押します。
- ④ 電子ダイヤルで一番右側の [★] マークに合わせ「SET」を押します。
- ⑤ 「レンズなしレリーズ」を選択し、「SET」を押します。
- ⑥ 「C.FnIV：操作・他の項目 レンズなしレリーズ」[1：する]を選択し、「SET」を押します。
- ⑦ レンズの絞りリングで絞りを設定します。

([Mモード] を設定している場合は、シャッタースピードも設定してください)

- ・測光は絞り込み測光(絞り込んだ状態での測光)になります。
- ・デジタルカメラには設定された絞り値は表示されません。
- ・画像データにレンズ焦点距離・絞り値は記録されません。
- ・デジタルカメラ側で、絞り値の設定はできません。

⑧ レンズのフォーカスリングでピントを合わせて撮影します。

- ・ピント合わせ時、液晶画面右下の拡大を選択すると、ピントが合わせやすくなります。

・オートフォーカスは働きません。

※ 使用するレンズの焦点距離は、およそ 1.6倍換算になります。

⇒(50mmレンズを使用した場合、80mmレンズ相当になります)

● ソニー Eマウント

- ① 撮影モード [AまたはM] を選びます。
- ② カメラ背面にある「MENU」ボタンを押します。
- ③ コントロールホイールで「セットアップ」に合わせて中央のボタンを押します。

④ 「レンズなし時のレリーズ」を「許可にする」にします。

⑤ レンズの絞りリングで絞りを設定します。([M] の場合はシャッタースピードも設定してください)

- ・正確な測光ができませんので、撮影結果を見て、お客様で調整してください。
- ・デジタルカメラには設定された絞り値は表示されません。

⑥ レンズのフォーカスリングでピントを合わせて撮影します。

- ・ピント合わせ時、[MFアシスト] を選択すると、ピントが合わせやすくなります。

(設定方法は、お使いのデジタルカメラ付属取扱説明書をお読みください)

・オートフォーカスは働きません。

※ 本製品では「焦点距離設定」並びに「歪曲収差補正」は設定できません。

※ 画像データにレンズの情報は記録されません。

※ 使用するレンズの焦点距離は、およそ 1.5倍換算になります。

⇒(50mmレンズを使用した場合、75mmレンズ相当になります)

※ 使用するレンズの焦点距離は、およそ 1.5倍換算になります。

⇒(50mmレンズを使用した場合、75mmレンズ相当になります)


取り外し準備

- デジタルカメラの電源をOFFにしてください。
- 取り外しの際は、ゆっくりていねいに回してください。

4. カメラから取り外す


*レンズとマウントアダプターの着脱は、必ず両手で行ってください。

デジタルカメラのレンズ取り外しボタンを押しながら、マウントアダプターを装着したレンズを矢印方向に止まるまで回して、外します。

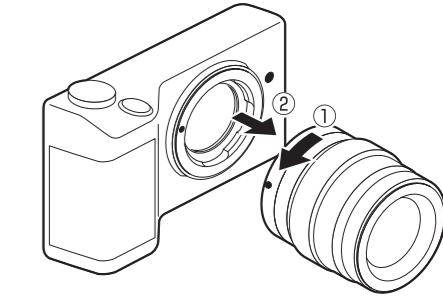

5. マウントアダプターからレンズを外す

レンズを反時計回りに回して外します。

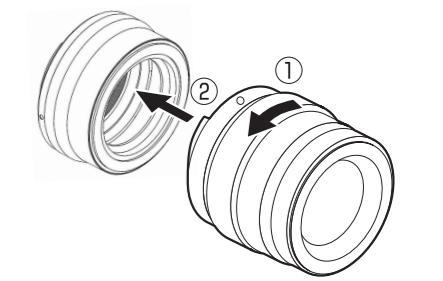

6. ご使用上のお願い

- お使いのレンズによっては、実際にピントが合う距離とレンズの距離表示がずれる場合があります。
- M42マウント以外のレンズを無理に装着すると破損の恐れがあります。ご使用にならないでください。
- 他マウントアダプターとの連絡で使用した場合、カメラ・レンズ・アダプター・アクセサリー等の破損、故障に対する保証はしておりません。
- レンズの交換は、ごみやほこりの少ないところで行ってください。
- 砂やほこりの多い場所での使用は、故障の原因になりますので、避けてください。
- 落下、強い衝撃には、十分注意してください。
- お手入れは、乾いた清潔な布で軽くふいてください。
- ベンジン、シンナー、アルコール、台所用洗剤等の溶剤使用は、お止めください。
- 汚れがひどい場合は、水にひたした布をよく絞ってから、汚れをふき取り、その後乾いた布でふいてください。
- お使いのデジタルカメラ付属取扱説明書を必ずお読みください。

Kenko

MOUNT ADAPTER

For M42
Instruction Manual

Thank you for purchasing this Kenko Mount adapter.

Read this instruction manual carefully before use and be sure to use the mount adapter correctly.


Note: Be sure to read the "Safety Precautions" before use.

 Kenko Tokina Co., Ltd.

<http://www.kenkoglobal.com/>

KT Nakano Building
5-68-10, Nakano, Nakano-ku, Tokyo 164-8616, Japan

Part names

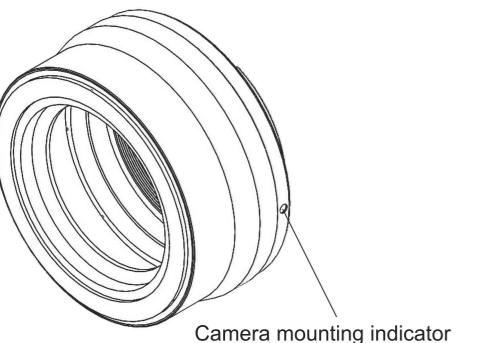

Camera mounting indicator

3. Setting up camera body

Setting up the digital camera. Turn the digital camera power on.

For details about product operations not indicated here, see the instruction manual or handbook supplied with your camera.

Note: These setup procedures are for cameras using the factory default settings, and therefore may differ depending on your specific camera settings.


Preparation for mounting

- Turn off the digital camera power.
- When mounting the mount adapter, rotate it slowly and gently.

1. Mounting mount adapter to lens


Note: Always use both hands when mounting/dismounting the lens and mount adaptor.

Connect the threads of the lens to those of the mount adapter and screw them together.

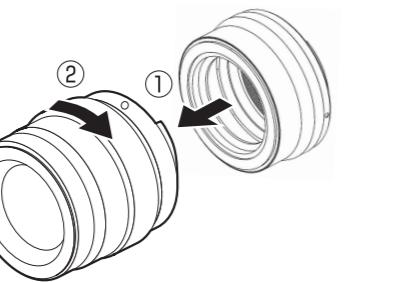

2. Mounting to camera

Align the camera mounting indicator on the mount adapter to the lens mounting mark on the digital camera, then rotate the mount adapter with the lens attached in the direction of the arrow until it clicks.

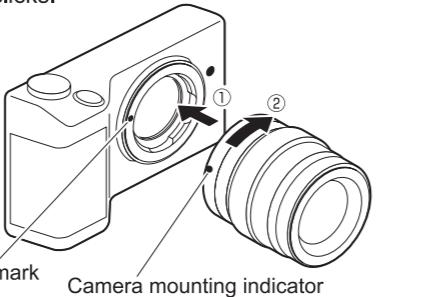

Lens mounting mark

Camera mounting indicator

Canon EOS M

- 1) Touch [Shooting mode] at the top left of the LCD screen.
- 2) Select the [Av] or [M] shooting mode.
- 3) Press the [MENU] button on the camera.
- 4) Use the electronic dial to align to the rightmost [★] mark and press [SET].
- 5) Select [Release shutter w/o lens] and press [SET].
- 6) Select [C.Fn IV: Operation/Others - Release shutter w/o lens] -> [1: Enable] and press [SET].
- 7) Use the aperture ring on the lens to set the aperture.
(When [M] mode is set, also set the shutter speed.)
- The camera switches to stop-down metering (metering with the aperture stopped down).
- The set aperture value is not displayed on the digital camera.
- The lens focal length or the aperture value is not recorded in the image data.
- The aperture value cannot be set on the camera.
- 8) Use the focus ring on the lens to adjust the focus and shoot.
- 9) Use the focus ring on the lens to adjust the focus and shoot.
- Select [Magnified view] at the bottom right of the LCD screen when adjusting the focus to make focusing easier.
- Auto focus cannot be used.

Note: The focal length used for the lens is equivalent to approximately 1.6x of the actual lens.

=> (When a 50mm lens is used, the focal length is equivalent to that of a 80mm lens.)

Sony E-mount

- 1) Select the [A] or [M] shooting mode.
- 2) Press the [MENU] button on the back of the camera.
- 3) Use the control wheel to align to [Setup] and press the center button.
- 4) Set [Release w/o Lens] to [Enable].
- 5) Use the aperture ring on the lens to set the aperture.
(When [M] mode is set, also set the shutter speed.)
- Metering cannot be performed accurately.
Therefore, adjust the aperture while checking the shooting results.
- The set aperture value is not displayed on the digital camera.
- The aperture value cannot be set on the camera.
- 6) Use the focus ring on the lens to adjust the focus and shoot.
- Select [MF Assist] when adjusting the focus to make focusing easier.
- Auto focus cannot be used.
(For details on this setting, see the instruction manual supplied with your digital camera.)

Note: The focal length used for the lens is equivalent to approximately 1.5x of the actual lens.

=> (When a 50mm lens is used, the focal length is equivalent to that of a 75mm lens.)

Micro Four Thirds

- 1) Press the [MENU/SET] button on the back of the camera.
- 2) Touch [REC] mode displayed on the LCD screen.
- 3) Touch to select the [Av] or [M] shooting mode.
- 4) Press the [MENU/SET] button on the back of the camera.
- 5) Touch [CUSTOM] displayed on the LCD screen.
- 6) Select [SHOOT W/O LENS] and press the [MENU/SET] button.
- 7) Select [ON] and press the [MENU/SET] button.
- 8) Use the aperture ring on the lens to set the aperture.
(When [M] is set, also set the shutter speed.)
- The camera switches to stop-down metering (metering with the aperture stopped down).
- The set aperture value is not displayed on the digital camera.
- The lens focal length or the aperture value is not recorded in the image data.
- The aperture value cannot be set on the camera.
- 9) Use the focus ring on the lens to adjust the focus and shoot.
- Select [MF ASSIST] when adjusting the focus to make focusing easier.
(For details on this setting, see the instruction manual supplied with your digital camera.)
- Auto focus cannot be used.

Note: The focal length used for the lens is equivalent to approximately 2x of the actual lens.

=> (When a 50mm lens is used, the focal length is equivalent to that of a 100mm lens.)

Fuji X-mount

- 1) Select the shooting mode, either [A] or [M].
- 2) Press the [MENU/OK] button on the back of the camera.
- 3) Select [ON] for [SHOOT WITHOUT LENS] in the Shooting menu.
- 4) Use the aperture ring on the lens to set the aperture.
(When [M] mode is set, also set the shutter speed.)
- Metering cannot be performed accurately.
Therefore, adjust the aperture while checking the shooting results.
- The set aperture value is not displayed on the digital camera.
- The aperture value cannot be set on the digital camera.
- 5) Use the focus ring on the lens to adjust the focus and shoot.
- If the Focus mode is set to manual mode, the focus check can be used, which makes it easier to adjust the focus. (For details on this setting, see the instruction manual supplied with your digital camera.)
- Auto focus cannot be used.

Note: Neither [FOCAL LENGTH SETTING] nor [DISTORTION CORRECTION] can be used.

Note: No lens information is recorded in the image data.

Note: The focal length used for the lens is equivalent to approximately 1.5x of the actual lens.

=> (When a 50mm lens is used, the focal length is equivalent to that of a 75 mm lens.)

6. Handling Guidelines

- The actual focal length may differ from the displayed lens focal length depending on the lens being used.
- Do not use lenses other than the M42 lens. Forcibly mounting a different type of lens may damage components.
- No warranty will be provided for any breakage or malfunction in the camera, lens, adapter or other accessories, etc. if an other mount adapter is used together with this mount adapter.
- Replace the lens in a location where there is little dirt or dust.
- Avoid using the mount adapter in a location where there is a lot of dirt or dust. Doing so may cause a malfunction.
- Be very careful not to drop or subject strong impacts to the mount adapter.
- To clean the mount adapter, gently wipe it with a clean dry cloth.
- Do not use solvents such as benzine, thinner, alcohol, and kitchen detergent.
- If the mount adapter is particularly dirty, soak a cloth in water, thoroughly wring out the cloth, wipe of the dirt and then immediately wipe dry with a dry cloth.
- Be sure to read the instruction manual supplied with your digital camera.


Preparation for dismounting

- Turn off the digital camera power.
- When dismounting the mount adapter, rotate it slowly and gently.

4. Dismounting from camera

Note: Always use both hands when mounting/dismounting the lens and mount adaptor.

While pressing and holding the lens removal button on the digital camera, rotate the lens with the mount adapter attached in the direction of the arrow until it stops, and then dismount it.

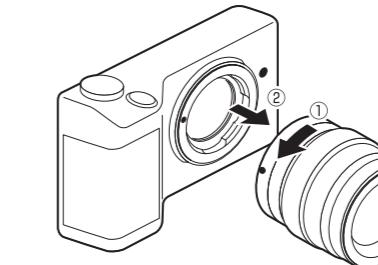

5. Dismounting lens from mount adapter

Rotate the lens counterclockwise and remove.

